



COOKTOP PARTSFor Model: SF114PXSW0, SF114PXST0, SF114PXSB0, SF114PXSQ0 (White) (Designer Biscuit) (Black) (Desinger White)

30" GAS FREESTANDING STANDARD CLEAN RANGE ELECTRONIC IGNITION

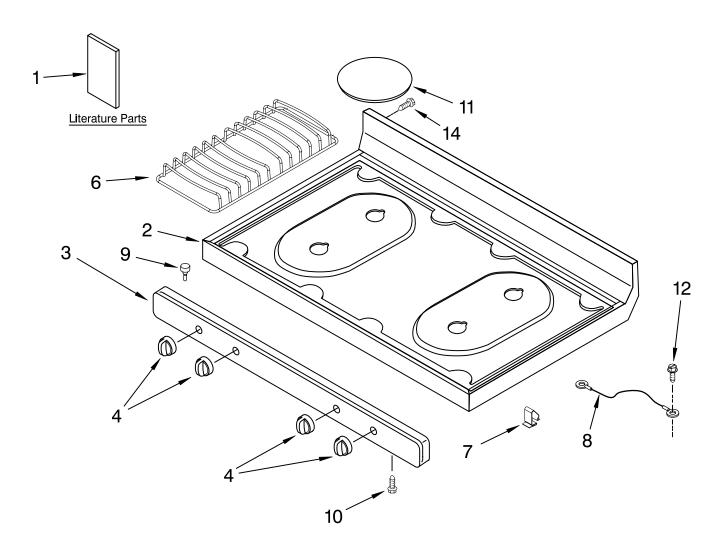


Illus No.		DESCRIPTION	Illus No.		DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	3		Panel, Manifold	7	98004722	Clip, Cooktop (2)
	98014966	Instructions		98018102B	Black	8		Wire, Ground
		Installation		98018102T	Biscuit	9	98013389	Bumper, Cooktop
	98015589	Installation Instr		98018102W	White	10	98005000	Screw (3)
		(Template)	4		Knob, Burner (4)	11		Cap, Burner
	W10032120	Guide, Use & Care		98006100	Black		98014946	Black
	98007130	Safer Cooking Tips		98008208	Biscuit		98014947	Grey
	98018086	Tech Sheet		98006102	White	12	8534079	Screw
2		Cooktop	6		Grate, Burner (2)	14	98007225	Screw
	98009677	White		98017779	Black			
	98009678	Biscuit		98017780	Grey			
	98009676	Black				1		

BACKGUARD PARTS
For Model: SF114PXSW0, SF114PXST0, SF114PXSB0, SF114PXSQ0 (White) (Designer Biscuit) (Black) (Desinger White)

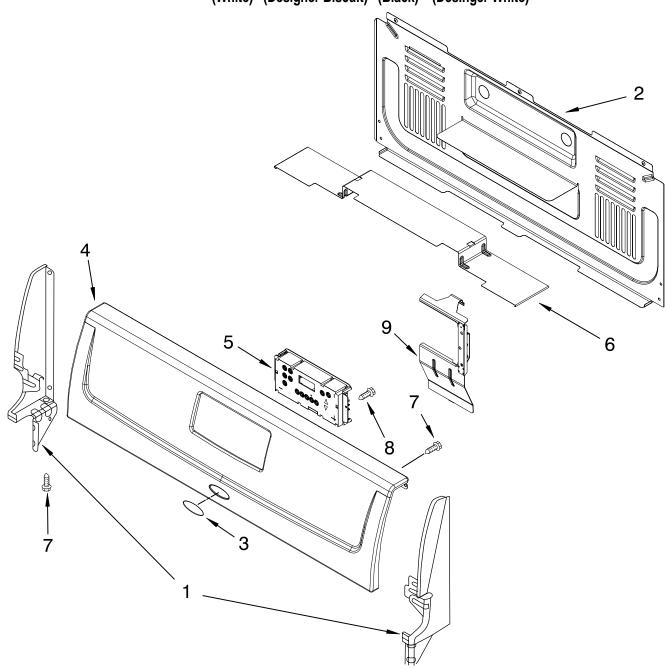

Illus. No.	Part No.	DESCRIPTION	Illus No.	. Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
2	98004633 98008274 98008275 98005336 98005337	Endcap Black Left Black Right Biscuit Left Biscuit Right White Left White Right Rear, Backguard	3 4	9757609 98017734B 98017734T 98017734W	Biscuit	5 6 7 8 9	9762212 9762213 9762211 98018061 98015526 98004219 98018144 98018143	Biscuit White Deflctor, Rear Cvr Screw Screw Bracket, Timer Left

MANIFOLD PARTS
For Model: SF114PXSW0, SF114PXST0, SF114PXSB0, SF114PXSQ0 (White) (Designer Biscuit) (Black) (Desinger White)

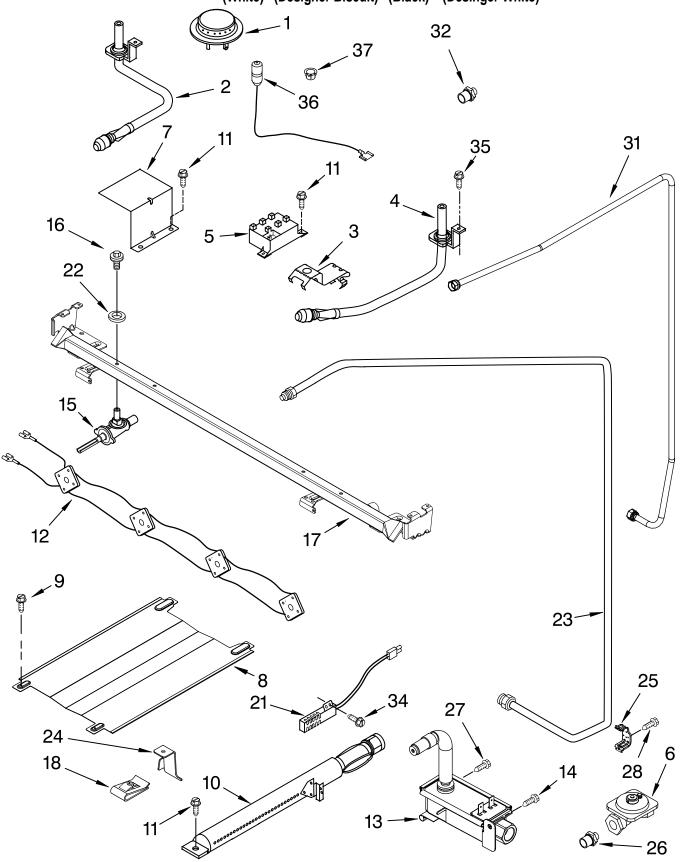

MANIFOLD PARTS


For Model: SF114PXSW0, SF114PXST0, SF114PXSB0, SF114PXSQ0 (White) (Designer Biscuit) (Black) (Desinger White)

Illus. No.	Part No.	DESCRIPTION
1		Burner, Top
•	98004410	Left
_	98003939	Right
2 3	98005860	Venturi, Front (2)
3 4	98005500 98005862	Brkt., Venturi (4) Venturi, Rear (2)
5	6610341	Spark Module
6	98007411	Regulator
7	98007192	Cover, Module
8 9	98015099 98006632	Spreader, Flame Screw
10	98012138	Burner, Oven
11	98006633	Screw
12	98017409	Harness, Switch
13	98014893	Valve, Oven
14 15	98006633	Screw Valve, Burner (4)
10	98005574	9,500 BTU
	98005626	11,500 BTU
16	98005521	Bolt, Valve Mtg
17 18	98013574 98009179	Pipe, Manifold U–Nut
21	98005652	Igniter, Oven
		Öven Pilot)
22	98007132	Washer, Valve (4)
23	98007428	Tubing (Regltr to Oven Valve)
24	98013314	Locator, Burner
25	98007410	Bracket, Regulator
26	98007431	Fitting 3/8to9/16
27 28	98013634 1180823	Screw Screw
31	98007429	Tubing, Inlet
32	98007430	Fitting 1/4to9/16
34	98005659	Screw
35 36	98004484	Screw Igniter, Top
50	98014514	RF
	98017917	RR
	98014515	LF
37	98014516 98015032	LR Clip, Igniter
<u> </u>	30013032	Ciip, igriitei
	FOLLOW	VING PARTS

FOLLOWING PARTS NOT ILLUSTRATED

98013676 LP Orifice Kit (For Use With LP) 98013677 Nat Orifice Kit (For use with Natural Gas)

CHASSIS PARTS

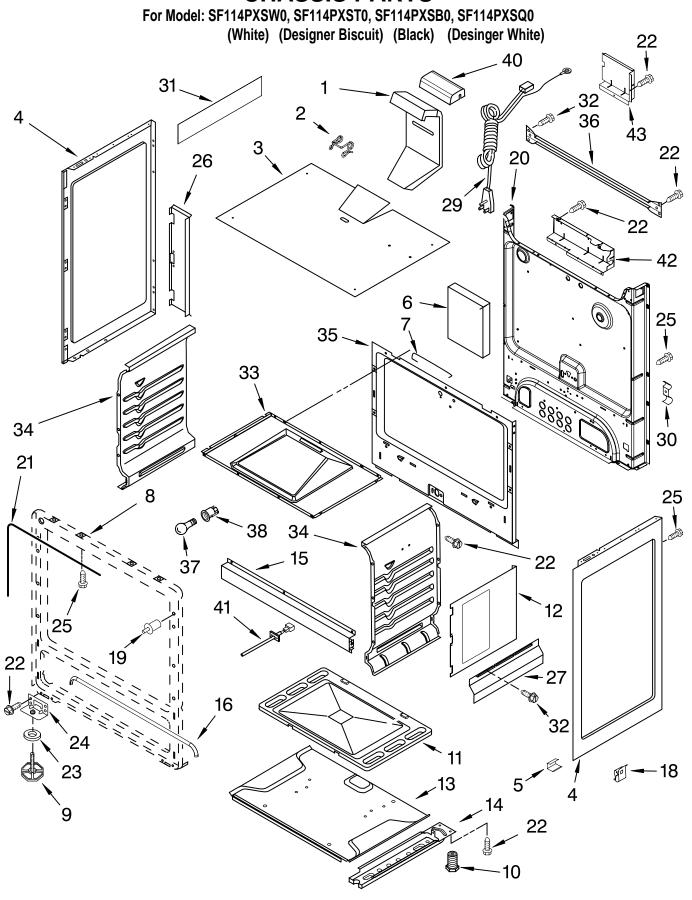

CHASSIS PARTS
For Model: SF114PXSW0, SF114PXST0, SF114PXSB0, SF114PXSQ0 (White) (Designer Biscuit) (Black) (Desinger White)

Illus. No.	Part No.	DESCRIPTION
1	98003799	Flue Box
2	98013690	Clip, Flue
3	98014398	Shield, Insulation
4		Panel, Side (2)
	98010042	White
	98010045	Biscuit
_	98010043	Black
5	98005502	Clip, Oven Bottom
6 7	98006710 98006739	Counterweight Wire, Brick
8	98005044	Frame, Front
9	98005306	Foot, Front (2)
10	9761935	Foot, Rear (2)
11	98004449	Bottom, Oven
12	98015683	Baffle, Side (2)
13	98003847	Baffle, Base
14	98003830	Rail, Base (2)
15	98012175	Support, Burner
16 18	98017162 98009179	Gasket, Broil Door U-Nut
19	3196262	Switch, Door
20	98015100	Back, Main
21	98017163	Seal, Oven
22	98006633	Screw
23	98007193	Washer
24	98007126	Base, Foot
25	98006632	Screw
26	98006715	Shield, Channel
27 29	98007191 98014532	Shield, Lower Cord, Power
30	98005026	Clin Tuhing
31	98015346	Clip, Tubing Foil, Side (2)
32	98006634	Screw
33	98004447	Top, Oven
34		Side, Oven
	98004452	Right Hand
	98004451	Left Hand
35	98013777	Back, Oven
36 37	98015363 98004498	Support, Rear Bulb, Light
38	98004498	Socket, Light
40	98007205	Cap, Insulation
41	8273902	Sensor, Oven
42	98014105	Cover, Valve
43	98014104	Cover, Socket


INSULATION

98014360 Insulation, Wrap 98004286 Insulation, Back

8191156


OVEN & BROILER PARTS

For Model: SF114PXSW0, SF114PXST0, SF114PXSB0, SF114PXSQ0 (White) (Designer Biscuit) (Black) (Desinger White)

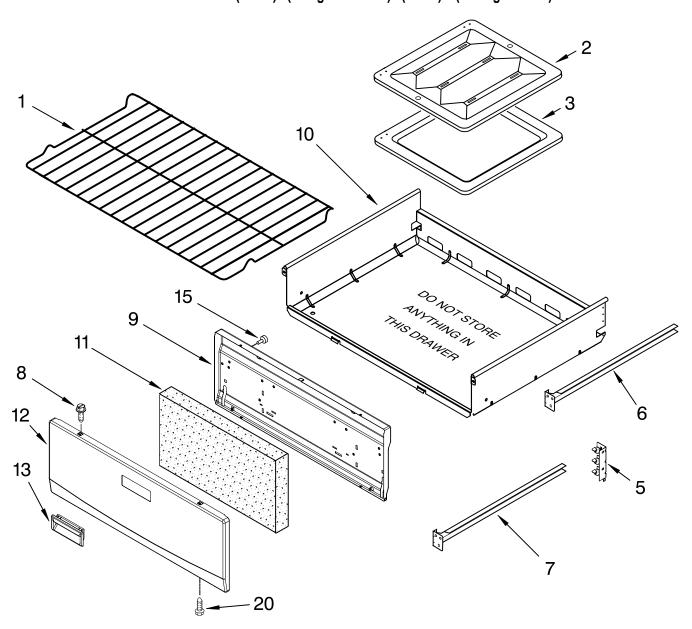

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1 2 3 5	98003480	Right (2) Guide, Fixed(2) Left Right Guide, Mobile(2) Left	9 10 11	98017784	Biscuit	12 13 15 20	98009342 98009341 98009343 98008486 98008488 98015643 98004052 98004219	Biscuit Black Handle, Brlr Door White Biscuit Black Bumper, Door(2)

DOOR PARTSFor Model: SF114PXSW0, SF114PXST0, SF114PXSB0, SF114PXSQ0 (White) (Designer Biscuit) (Black) (Desinger White)

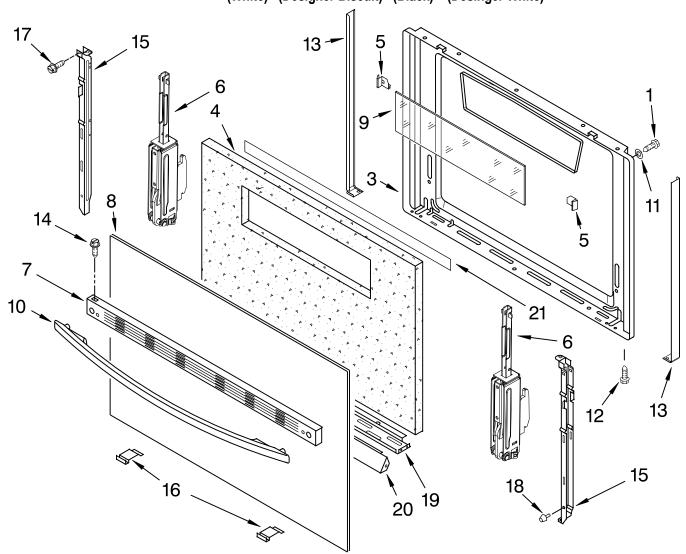

Illus.		DECODIDEION	Illus		DECODIDEION	Illus.		DECODIDEION
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	8533842	Screw	10		Handle, Oven Door	15		Retainer
3	98010182	Liner, Door		98017790B	Black		98004564	Right
4	98006753	Insulation, Door		98017790T	Biscuit		98004629	Left
5		Clip, Glass		98017790W	White	16		Lower Trim, Door
	98004952	Left	11	98010557	Actuator (2)		98010187	Black
	98004953		12	98004993	Screw		98010184	Biscuit
6	98017875	Hinge, Door (2)	13		Side Trim, Door(2)		98010185	White
7		Trim, Top Door		98016787B	Black Left	17	98004219	Screw
	98017767B	Black		98016795B	Black Right	18	98004227	Bumper
	98017767T	Biscuit		98016787T	Biscuit Left	19	98004938	Insulation,
	98017767W	White		98016795T	Biscuit Right			Retainer-Top
8		Panel, Door		98016787W	White Left	20	98012904	Insulation,
	98017961B	Black		98016795W	White Right			Retainer-Bottom
	98017961T	Biscuit	14		Screw	21	98017250	Retainer, Upper
	98017961W	White		98008545	Black			
9	98006801	Glass, Inner		98008169	Biscuit			
			l	98008544	White			

OPTIONAL PARTS

For Model: SF114PXSW0, SF114PXST0, SF114PXSB0, SF114PXSQ0 (White) (Designer Biscuit) (Black) (Designer White)

Illus. Part
No. No. DESCRIPTION
Illus. Part
No. No. DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828 Wire, Black 12 Ga. 150° c 8316781 Wire, Black 14 Ga. 150°c 242821 Wire, Blue 14 Ga. 150°c 242822 Wire, Brown 14 Ga. 150°c 242830 Wire, Brown 14 Ga. 200°c 242823 Wire, Green 14 Ga. 150°c 242824 Wire, Orange 14 Ga. 150°c 242825 Wire, Red 14 Ga. 150°c 242831 Wire, Red 14 Ga. 200°c 242827 Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832 Kit, Porcelain Repair (White) 242756 Touch–Up Self–Clean(1/2 Pt) 261582 Grease

INSULATION

261514 Insulation, Fiberglass (1–1/2" x 24" x 120") 240132 Insulation, Fiberglass (2–1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017 White 4392899 Biscuit 511873 White Porcelain (2 Oz.) Illus. Part No. No. DESCRIPTION

WIRING HARNESS PARTS

98017728 Harness, Control 98005896 Clip, Wire 3196696 Clip, Wire 3391018 Cable Tie–Push Mnt 98015022 Bushing, Snap (2) 98005894 Clamp, Cord

PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White 4392901 Biscuit 285006 Superior Black 206922 Primer (White)

PAINT, BULK (1 qt.)

799344 White (Uncut) 4392900 Biscuit(Uncut)

ANTI-TIP KIT

98007059 Anti-Tip Kit

8191156 9